

# INSTRUCTIONS FOR DILUTION OF BIO-X KLEANZE AIR



① **Shake** Bio-X Kleanze Air bottle well before pouring



② Pour desired amount of Bio-X Kleanze Air into the mixing bottle



④ **Shake** the mixing bottle to make sure the solution is well mixed  
**DO NOT** keep the mixture solution for more than 2 weeks



③ Top up with water to the correspondent marking level based on dilution ratio of **1:15**



⑤ Pour the solution into humidifier

# BIO-X HUMIDIFIER ACCESSORIES




- Bio-X Humidifier
- Outer Box
- User Manual
- Type-C Charging Cable
- Spare Capillary Cotton Straw

# HOW TO MAINTAIN BIO-X HUMIDIFIER



- 1st time use:-  
fill up water tank full; Wait for the cotton straw to soak the liquid; and wobble the humidifier a bit
- After switching on:-  
if the emission is weak, it means:  
Either ➡ the cotton straw is not fully soaked with liquid  
Or ➡ the battery is weak
- Battery charging time is around 2.5 hours
- DO NOT overcharge battery
- When connecting to a charging cable, it will automatically switch off after:  
- 5 hours under continuous mode & 10 hours under interval mode
- Fully charged battery will last for:  
- 2 hours under continuous mode & 4 hours under interval mode

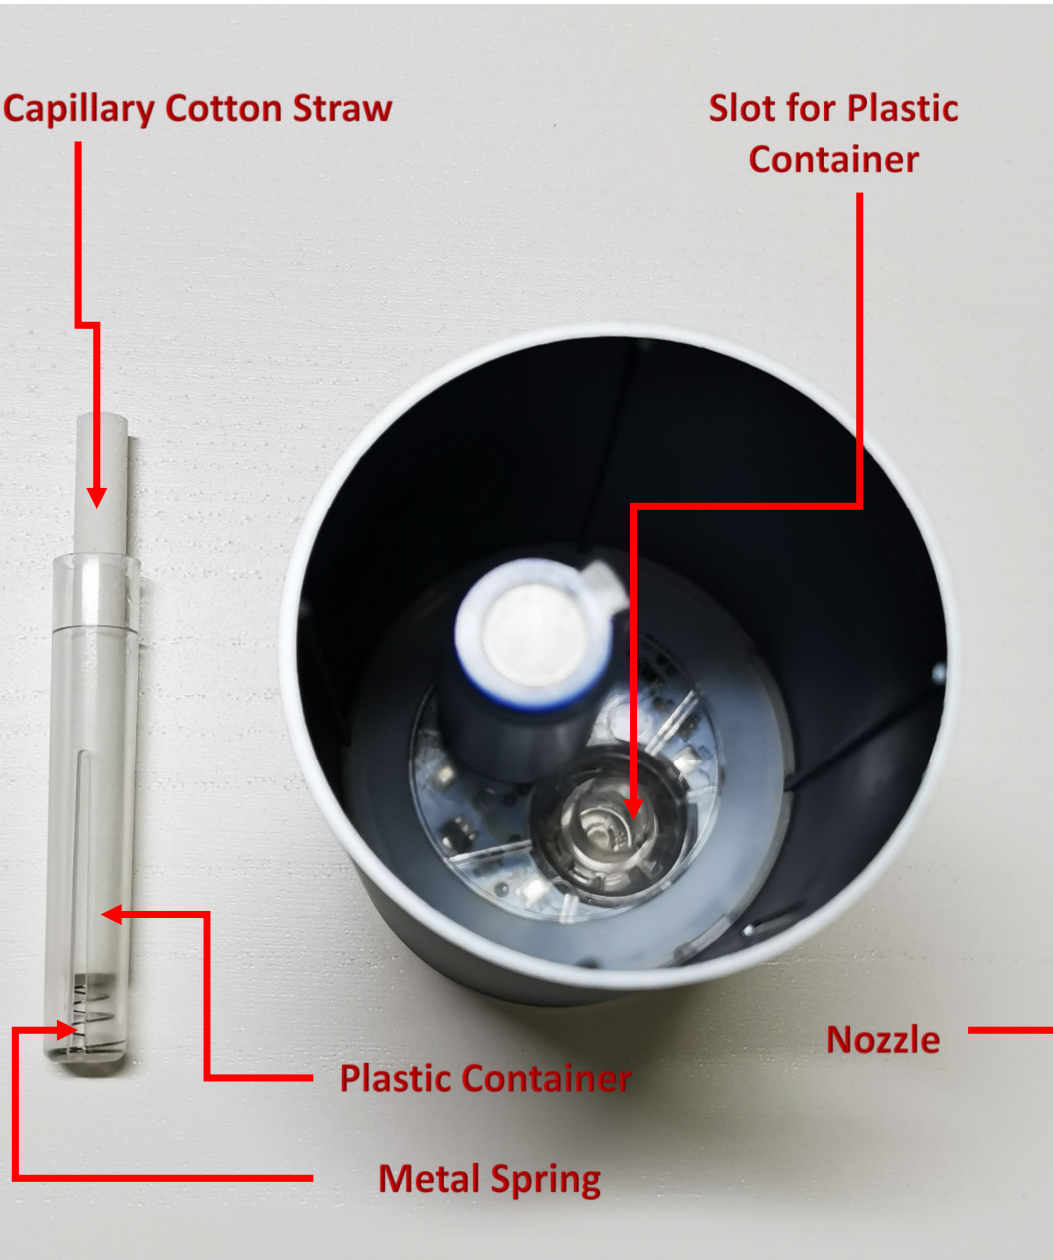

## HOW TO REPLACE COTTON STRAW

- Firmly pull out the plastic container
- Make sure the metal spring inside the plastic container remains intact.
- Wash & rinse the cotton straw with clean water if the nozzle is clogged



- When inserting back, make sure to push the plastic container all the way in.
- Use a cotton bud dipped with water or mild soap to gently clean the nozzle